

You can set a PIN for access to the Remote UI. All users use a common PIN.

NOTE

- When Department ID Management is enabled, setting here is not required. [▶ Setting the Department ID Management](#)

- 1** Select <Menu> in the Home screen. [▶ Home Screen](#)
- 2** Select <Management Settings>.
 - If the login screen appears, enter the correct ID and PIN. [▶ Logging in to the Machine](#)
- 3** Select <License/Other> / <Remote UI Settings/Update Firmware> ▶ <Remote UI Settings> ▶ <Restrict Access>.
- 4** Select <On>.
- 5** Specify the Remote UI Access PIN.
 - Enter a PIN, and select <Apply>.
 - The Confirm screen is displayed. Enter the PIN once again to confirm.



NOTE:

- You cannot register a PIN that consists only of zeros, such as "00" or "0000000."

IMPORTANT

- Do not forget your PIN. If you forget your PIN, use the procedure above to set a new PIN.